


FROST
DENMARK

SOAP DISPENSER 1939, FOR WALL


DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

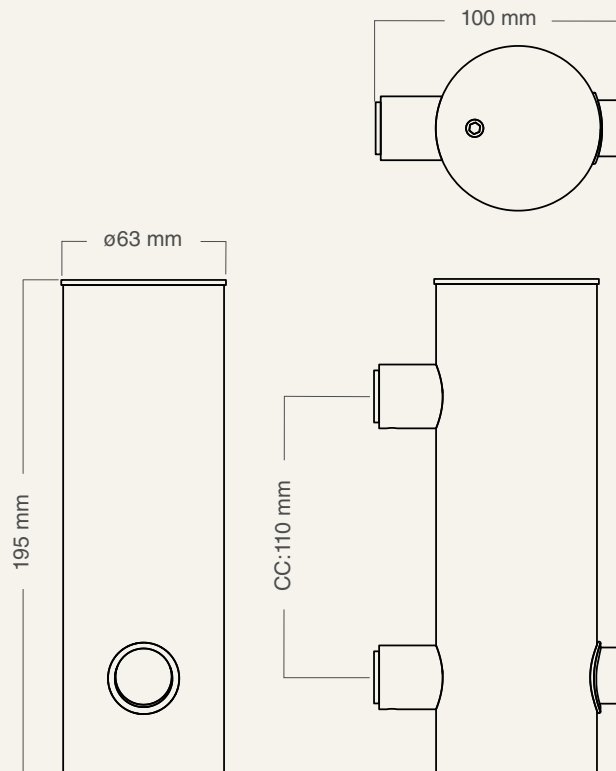

MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:

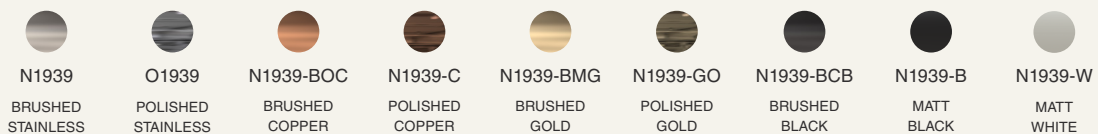


MOUNTING

- 1 Place the Soap dispenser in the desired position and mark the screw holes as illustrated, with a CC distance of 110 mm.

Drill the marked holes using a 6 mm drill bit and insert the enclosed $\varnothing 8 \times 38$ mm wall plugs (A).


NOTE: Do not mount the dispenser in the shower.

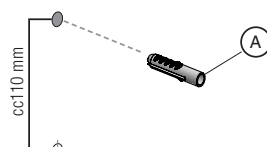

- x2
 $\varnothing 8 \times 38$
(A)
- x2
 $\varnothing 5 \times 60$
(B)
- x1
Hex key 2,5 mm
(C)
- x1
Hex key 4 mm
(D)


- 2 Secure the brass brackets on the wall with the enclosed $\varnothing 5 \times 60$ mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

Carefully push the Soap Dispenser onto the brackets.

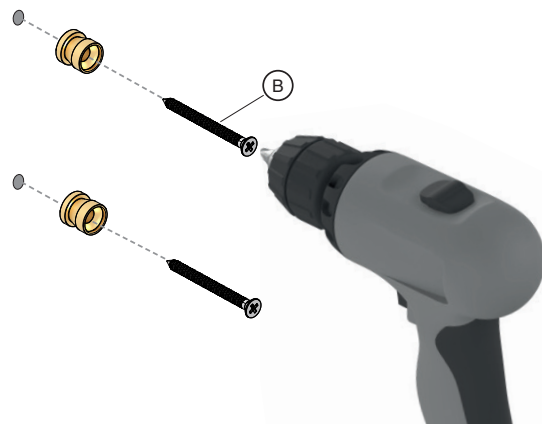

- 3 Securely tighten the set screws (E) with the 2,5 mm hex key (C), ensuring the Soap Dispenser is firmly fixed to the wall.


The dispenser is now ready to be filled with liquid soap (see the guide in the next step).

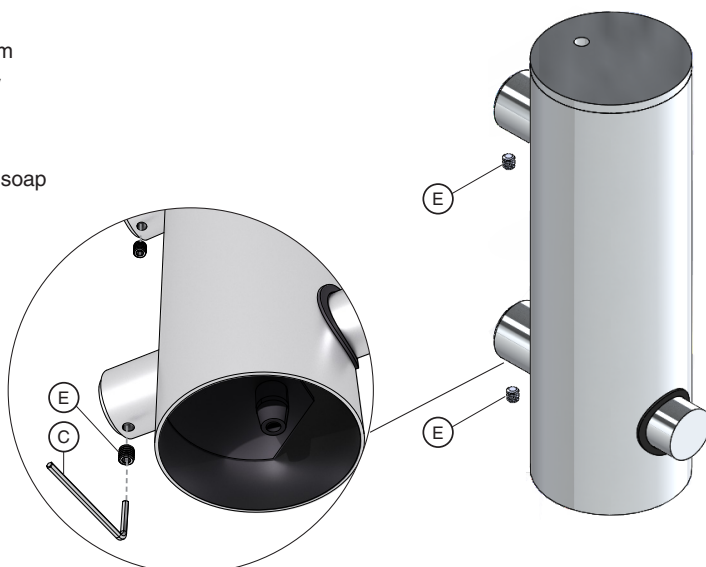

(RE)FILLING SOAP

1

Depending on the lid you use, open it by either simply lifting it up and down or by inserting the 4 mm hex key (D) into the designated hole.

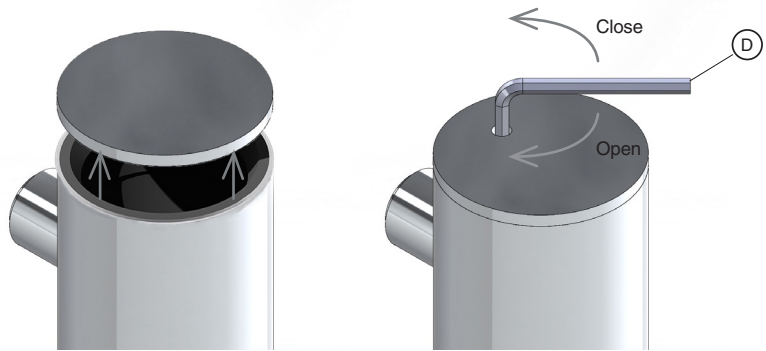


2

With the lid off now fill the container with soap. Once the container is filled, secure the lid back on again.

Note: please use a PH-neutral liquid soap to ensure the longevity of the soap dispenser.

Always use liquid with low viscosity, hence do not to use shampoo, conditioner or shower gel etc.

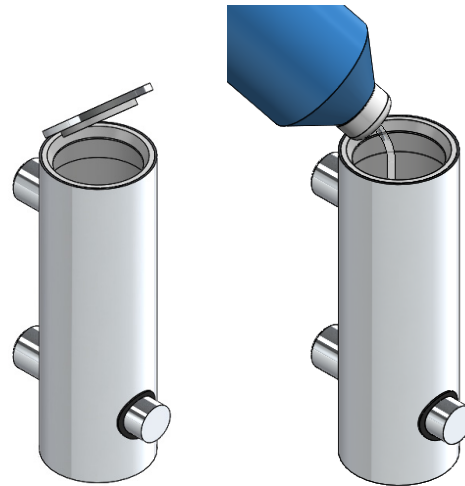

CARE INSTRUCTIONS

!


If the dispenser is not used for a long period of time and becomes clogged, pour warm water into the soap container and gently pump it to clear the blockage.

All surfaces should be cleaned with a microfiber cloth, glass cleaner or other non-abrasive and gentle agents. If stained, clean with warm soapy water. Use a soft cloth to wipe dry. Soap and cleaning agents must be regularly removed from stainless steel surfaces in order to prevent corrosion-like residues.

Never try inserting a sharp object e.g. pin into the soap nozzle. This can irreparably damage the pump and void the warranty.

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product.

Should brown deposits appear around the lid or pump, remove with soapy water and a soft brush. Hard deposits can be scratched off with your fingernail. In order to avoid this, try changing to a liquid soap with a neutral PH.

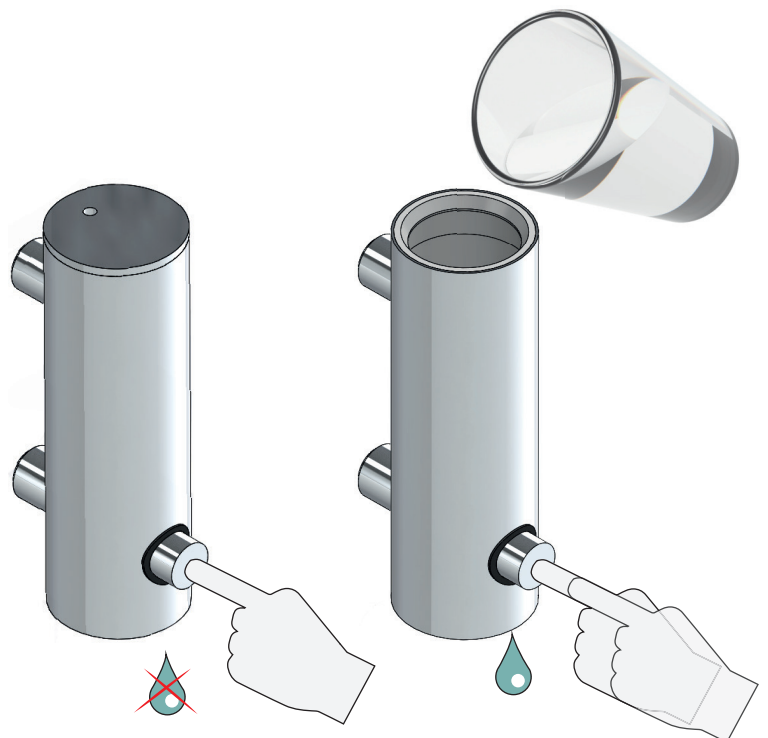

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

