


BASIN MIXER TAP 1989

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

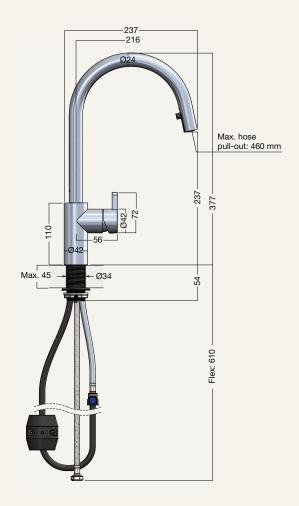


MATERIAL: STAINLESS STEEL AVAILABLE IN THE NINE FROST FINISHES:

BRUSHED

GOLD



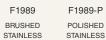



F1989-BOC BRUSHED COPPER



















F1989-W MATT WHITE




BEFORE MOUNTING

(1)

Decide where to place the mixer tap A. The spout can rotate 360°, allowing for different orientations of the handle. We recommend placing it on the right side, as illustrated in this mounting instruction.

Also note the placement of the inlet hoses for warm and cold water before installing.

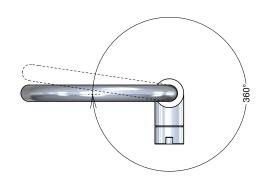

If replacing an old tap, turn off the water supply at the valves and drain any remaining water from the hoses into a bucket.

Remove the old tap.




MOUNTING



ALL MEASUREMENTS ARE IN MILLIMETERS WWW.FROSTDENMARK.COM


2 Next, insert the new Mixer Tap (A) into the hole in the sink or countertop.

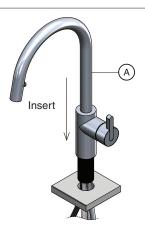

Slide the NBR washer \bigcirc and stainless steel washer \bigcirc onto the threaded sleeve \bigcirc , then screw on the fixing nut \bigcirc while holding the tap in place.


(3)

Use a PH2 screwdriver to tighten the two screws on the fixing nut (H) for extra stability.

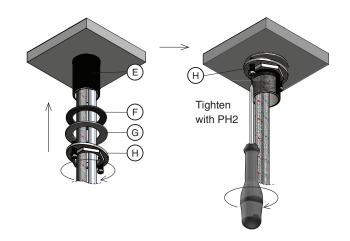

Reconnect the pull-out hose \bigcirc to the hose connector \bigcirc .

Then reattach the weight ① to the pull-out hose ②, it is important to position the weight at the bottom left side of the hose to ensure the pull-out function operates correctly.

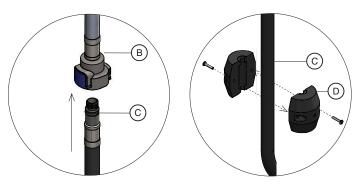


Reconnect the pull-out hose

Reattach the weight

Connect the red-marked inlet hose (F) to the hot water valve and the blue-marked inlet hose (G) to the cold water valve under the sink.

Tighten securely with a wrench.

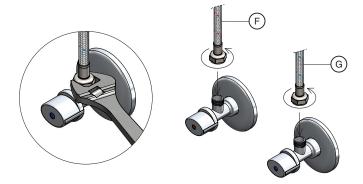

Turn on the water supply, check for leaks and retighten if needed. Once leak free, your mixer tap is ready for use.



The pull-out hose is now also ready for use.

Use the black tab on the hose head to extend the hose. It can be pulled out up to approximately 460 mm and is flexible for easy use and cleaning.



ALL MEASUREMENTS ARE IN MILLIMETERS WWW.FROSTDENMARK.COM

1

| Working Pressure | 1-5 bar |
|------------------|---------|
| Max. hot water | 65 °C |

Spare parts (*)

Can be bought for replacement

Aerator 19xx

Spanner 19xx

Cartridge 19xx

Additional parts (**)


Bought separately

Thread Sleeve 1904-80, 80 mm


Thread Sleeve 1904-100, 100 mm

Handle 1991-1 (H: 138 mm, W: 42 mm, P: 48 mm)

Scan or click the QR code to view video guides on replacing parts.

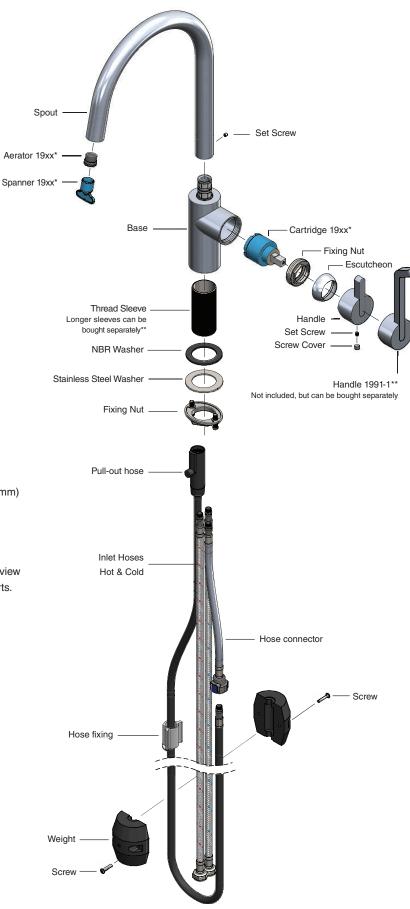

WWW.FROSTDENMARK.COM

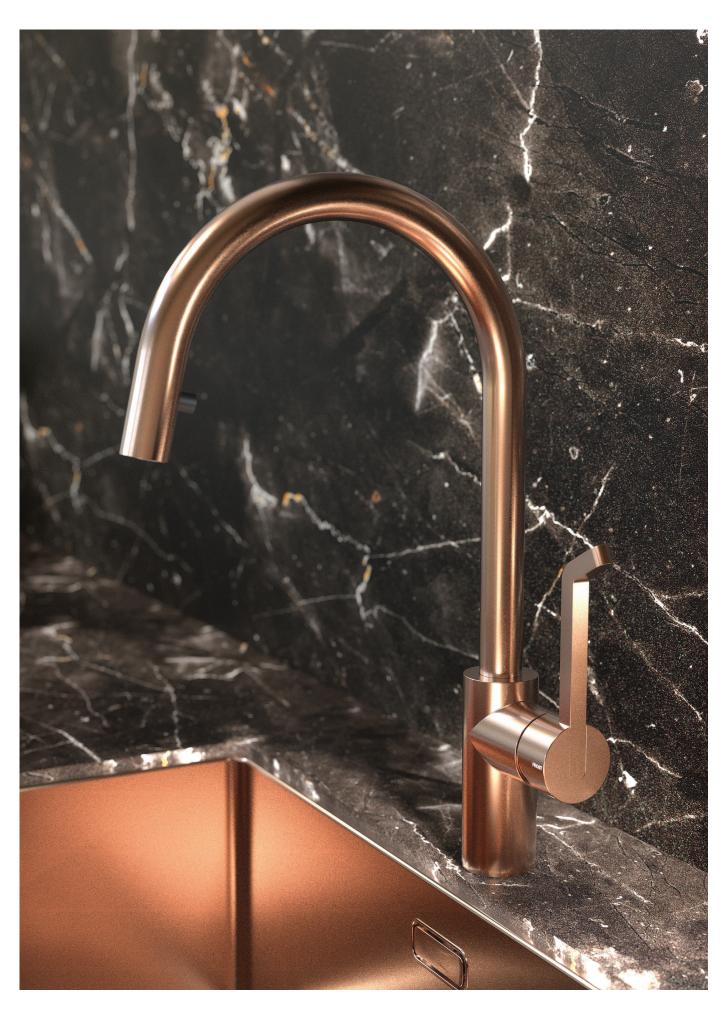

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn





