


TOWEL BAR 1916-1, 1916-2, 1916-3, 1916-4

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

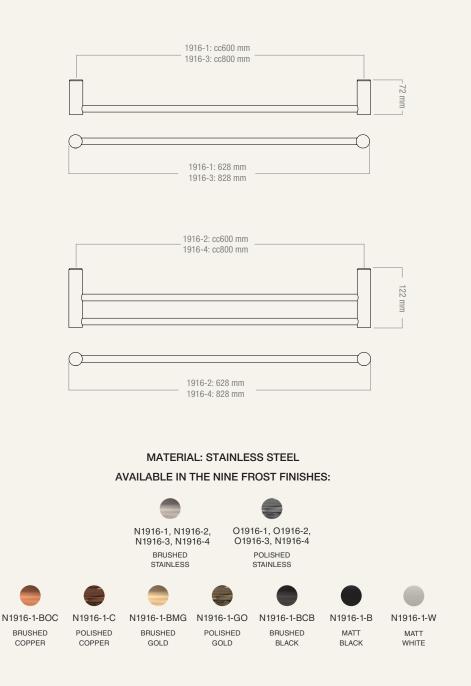




MOUNTING

(1)

Place the Towel Bar in the desired position and mark the screw holes as illustrated, with a CC distance of either 600 or 800 mm.


Drill the marked holes using a 8 mm drill bit and insert the enclosed Ø8x38 mm wall plugs (A).

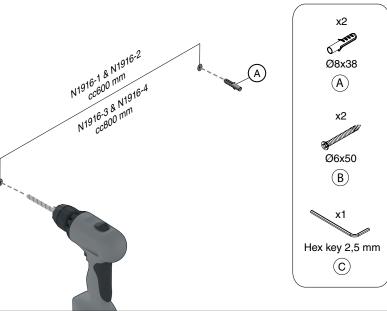

2


3

Secure the inserts onto the wall with the enclosed Ø6x50 mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

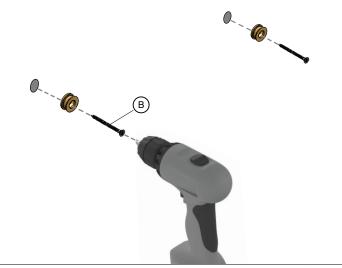

Press the Towel Bar on to the two inserts.

Securely tighten the set screws D underneath the Towel Bar with the hex key \bigcirc .

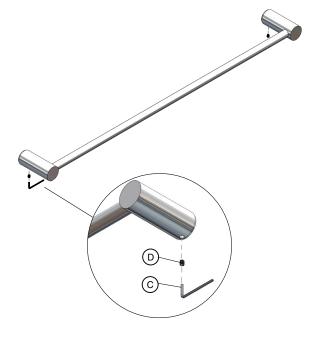

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn

