


FROST
DENMARK

MIRROR WITH HOOK

4120 & 4121

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

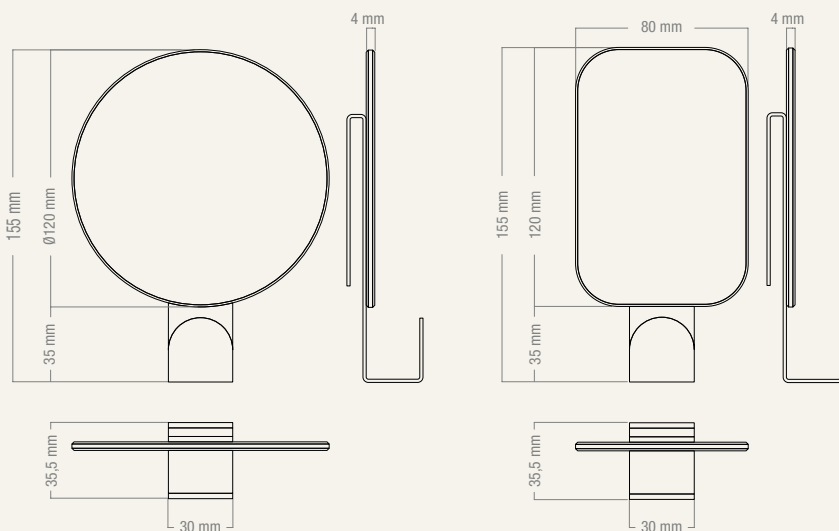

MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:






MOUNTING

- 1 Place the Mirror in the desired position and mark the screw holes as illustrated, with a CC distance of 50 mm.

Drill the marked holes using a 6 mm drill bit and insert the enclosed $\varnothing 6 \times 30$ mm wall plugs (A).

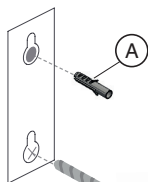

x2

 $\varnothing 6 \times 30$


(A)

x2

 $\varnothing 4 \times 32$


(B)

- 2 With a PH2 bit tighten the enclosed 4x32 mm screws (B), but leave a small gap between the screw head and the wall.

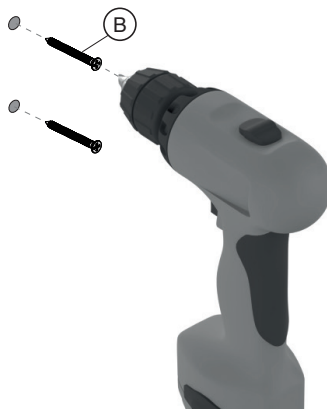

- 3 Mount either the Mirror 4120 or 4121 on to the screws. Simply lift it onto the screws and slide it down until it locks into place.

Your Mirror with hook is now ready for use.

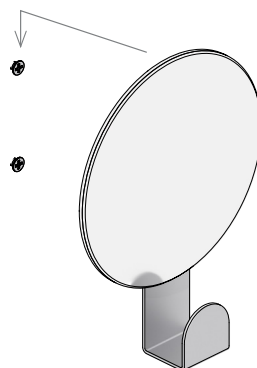

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

