


**FROST**  
DENMARK

## MIRROR TB600

DESIGNED BY TENGBOM

PRODUCT DETAILS, TECHNICAL DETAILS  
AND FITTING INSTRUCTIONS

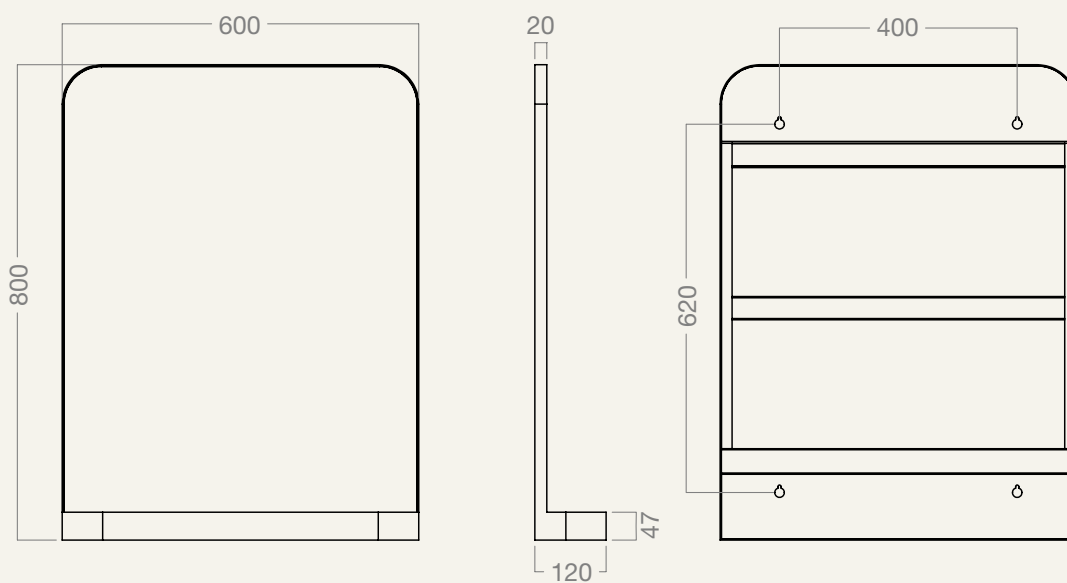

MATERIAL: ALUMINIUM

AVAILABLE IN THE FROST FINISHES:



TB600-B  
MATT  
BLACK



TB600-W  
MATT  
WHITE




## MOUNTING



Mirror TB600 is compatible with the Backlight Plate TB600-BACK (sold separately).


For installation with the backlight plate, please refer to the dedicated mounting instructions.

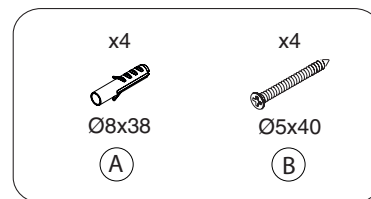

Mark the placement of the screw holes for mounting the mirror on the wall.

Drill out the marked holes with a 8 mm drill bit and insert the enclosed Ø8x38 mm wall plugs (A).  
With a PH2 bit tighten the enclosed 5x40 mm screws (B), but leave a small gap between the screw head and the wall.

\*NOTE: some older models have different cc measure of 742 mm.

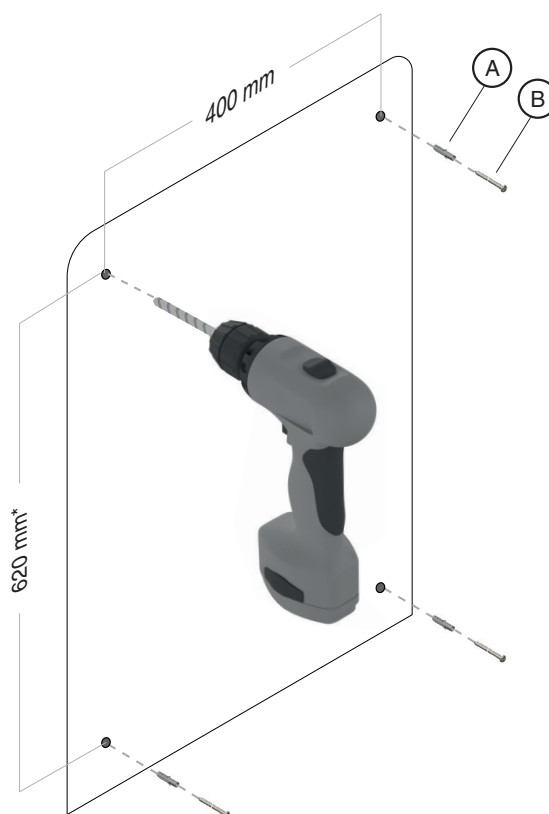

Lift the Mirror onto the screws and slide it down until it locks securely into place.



#### **CLEANING AND MAINTENANCE**

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### **ATTENTION:**

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

#### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

#### **WARNING AND HAZARD NOTICES**

Improper mounting or use can lead to accidents and serious injuries.

**[www.frostdenmark.com](http://www.frostdenmark.com)**

We are also to be found as frostdenmark on Facebook,  
Instagram, Pinterest and LinkedIn

