
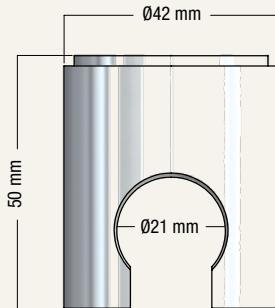


FROST
DENMARK

SHOWER HEAD HOLDER 1995-3

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

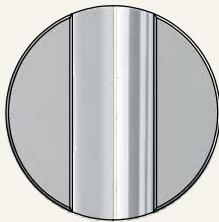

MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:



F1995-3

BRUSHED
STAINLESS



F1995-3-P

POLISHED
STAINLESS



F1995-3-BOC

BRUSHED
COPPER



F1995-3-C

POLISHED
COPPER



F1995-3-BMG

BRUSHED
GOLD



F1995-3-GO

POLISHED
GOLD



F1995-3-BMG

BRUSHED
BLACK




F1995-3-B

MATT
BLACK



N1995-3-W

MATT
WHITE

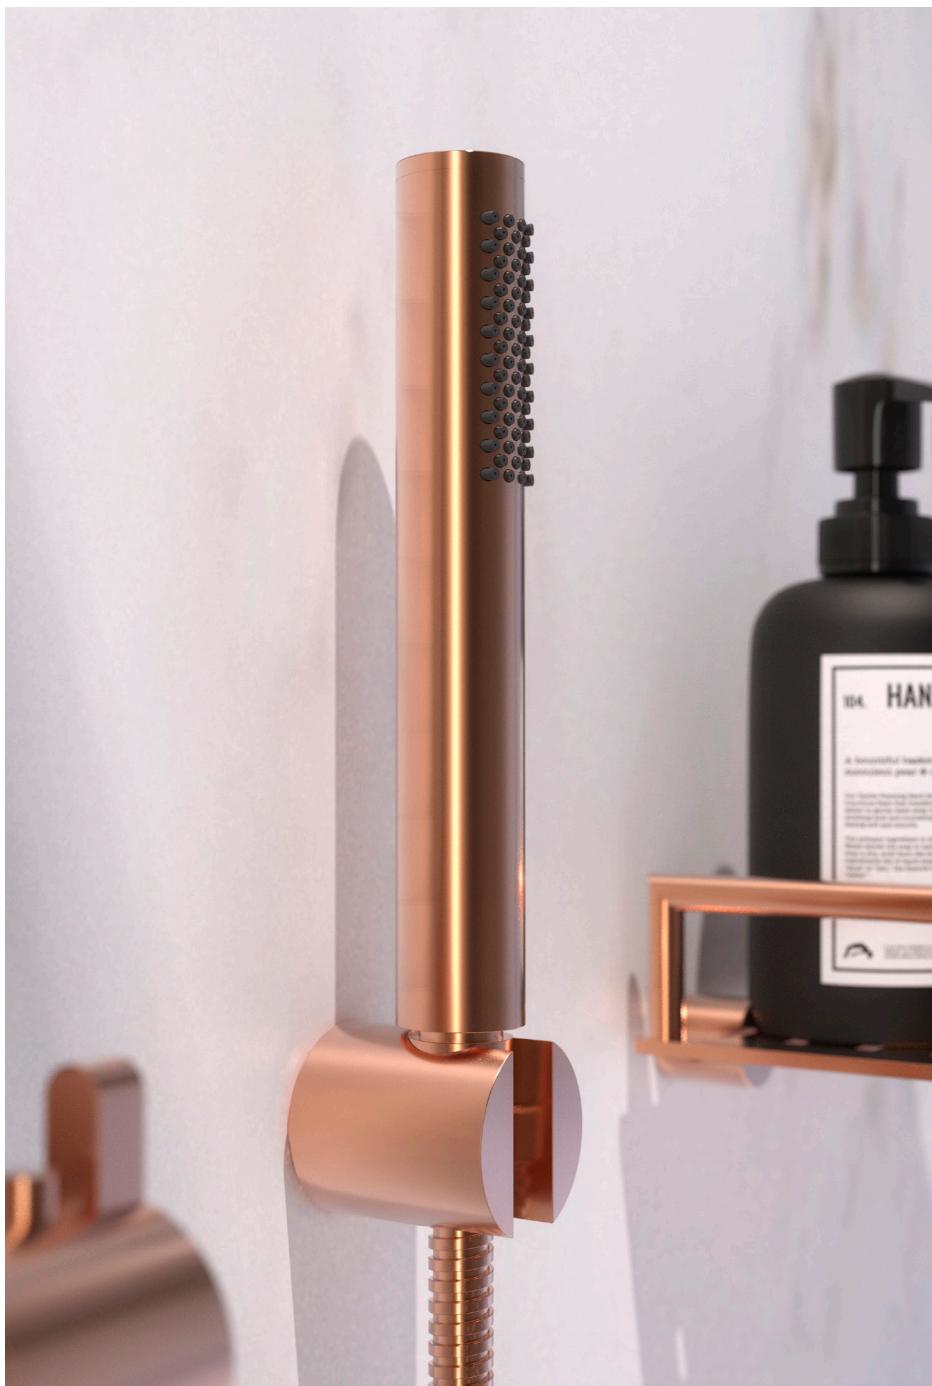


MOUNTING

1 Place the Shower Head Holder in the desired position and mark the screw holes as illustrated, with a CC distance of 16 mm.

Drill the marked holes using a 6 mm drill bit and insert the enclosed Ø6x30 mm wall plugs (A).




2 Secure the insert on the wall with the enclosed Ø4x40 mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

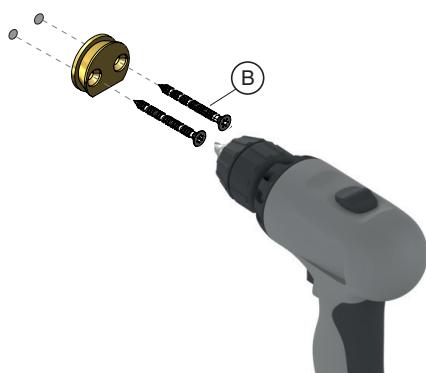

3 Press the Shower Head Holder on to the insert.

Securely tighten the set screw (D) underneath with the hex key (C).

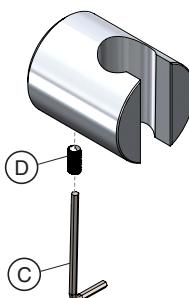

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

