


# HOOK 1901-1 & HOOK 1901-2

#### DESIGNED BY BØNNELYCKE MDD

## PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

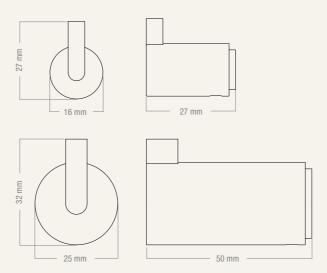

# MATERIAL: STAINLESS STEEL AVAILABLE IN THE NINE FROST FINISHES:
























STAINLESS

BRUSHED COPPER

POLISHED COPPER

BRUSHED GOLD

POLISHED GOLD

BRUSHED BLACK

N1901-1-B MATT BLACK

N1901-1-W N1901-2-W MATT WHITE



### **MOUNTING**

Place the Hook in the desired position and mark the screw hole.

Drill the marked hole using a 6 mm drill bit.




2 Insert the enclosed Ø6x30 mm wall plug (A).

Secure the brass insert on the wall with the enclosed Ø4x40 mm screw (B) and use a Phillips screwdriver with bit PH2 to tighten the screw.



Press the Hook on to the brass insert.

Securely tighten the set screw ① underneath with either the 2 or 2,5 mm hex key ②.

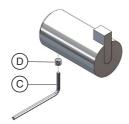

#### CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

#### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

#### WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

#### www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn





