


# **TOWEL BAR 1916-1**

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

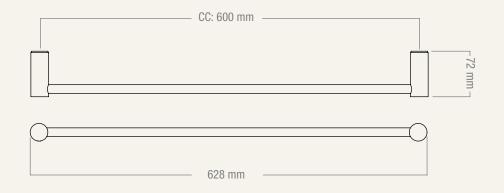

## MATERIAL: STAINLESS STEEL AVAILABLE IN THE NINE FROST FINISHES:






## MOUNTING

(1)

Place the Towel Bar in the desired position and mark the screw holes as illustrated, with a CC distance of either 600 or 800 mm.


Drill the marked holes using a 8 mm drill bit and insert the enclosed Ø8x38 mm wall plugs (A).

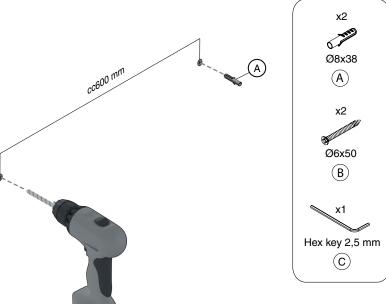

2


3

Secure the inserts onto the wall with the enclosed Ø6x50 mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

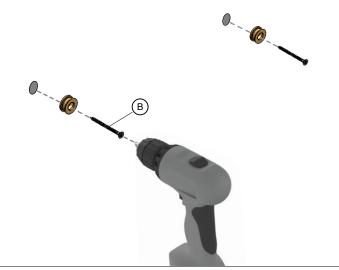

Press the Towel Bar on to the two inserts.

Securely tighten the set screws D underneath the Towel Bar with the hex key C.

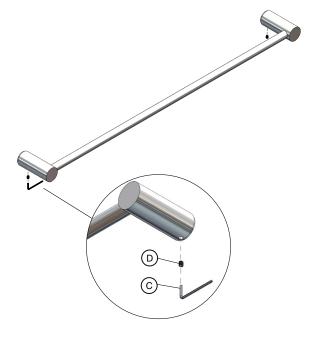

## CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

## EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

## WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

#### www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn

