


DOOR STOP 1931 & DOOR STOP 1931-1

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

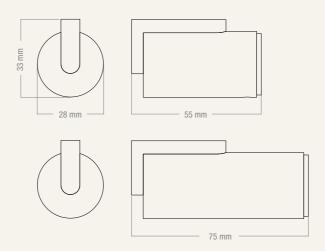

MATERIAL: STAINLESS STEEL / BLACK RUBBER AVAILABLE IN THE NINE FROST FINISHES:































N1931-1-W MATT

BRUSHED COPPER

POLISHED COPPER

BRUSHED GOLD

POLISHED GOLD

BRUSHED BLACK


MATT BLACK WHITE



MOUNTING


Place the Door Stop in the desired position and mark the screw hole.
The Door Stop can be mounted on either the wall or the floor.

Drill the marked hole using a 6 mm drill bit.

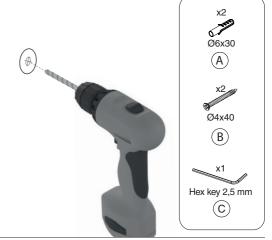

2 Insert the enclosed Ø6x30 mm wall plug (A).

Secure the brass insert with the enclosed Ø4x40 mm screw (a) and use a Phillips screwdriver with bit PH2 to tighten the screw.

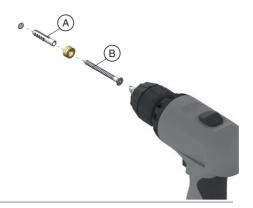

Press the Door Stop on to the brass insert.

Securely tighten the set screw \bigcirc underneath with the 2,5 mm hex key \bigcirc .



CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn





