


FROST
DENMARK

HOOK 3012-022 & HOOK 3012-036


DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

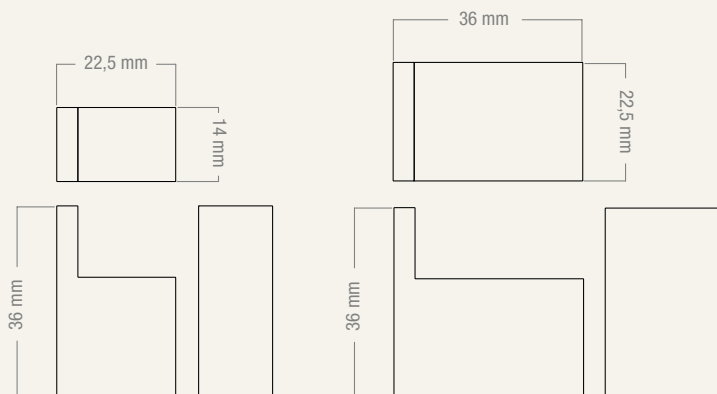

MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:

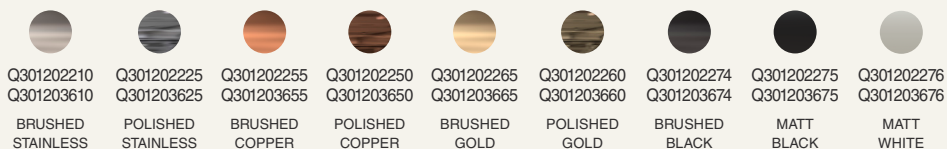



MOUNTING

- ① Place the Hooks in the desired position and mark the screw holes.

Drill the marked holes using a 6 mm drill bit.



x2


Ø6x30

(A)

x2

Ø4x40


(B)

x1

Hex key 2,5 mm

(C)


- ② Insert the enclosed Ø6x30 mm wall plugs (A).

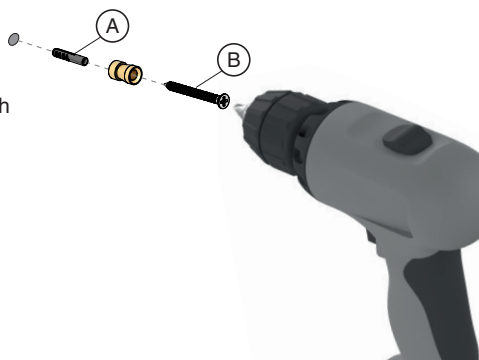Secure the brass inserts on the wall with the enclosed Ø4x40 mm screw (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.



- ③ Press the Hooks on to the brass inserts.

Securely tighten the set screws (D) underneath with the 2,5 mm hex key (C).

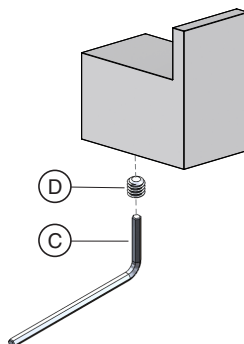

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

