


**FROST**  
DENMARK

## MINI CAMOUFLAGE 3002


DESIGNED BY BUSK + HERTZOG

PRODUCT DETAILS, TECHNICAL DETAILS  
AND FITTING INSTRUCTIONS

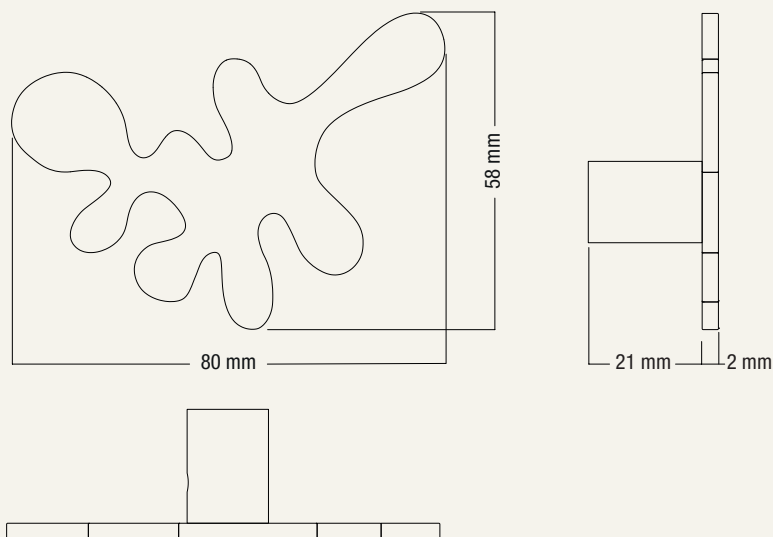

**MATERIAL: STEEL**

**AVAILABLE IN THE FROST FINISHES:**

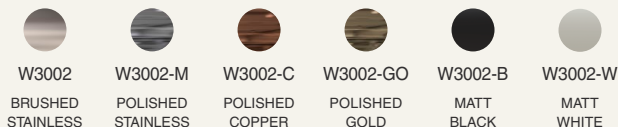



## MOUNTING

- 1 Place the Mini Camouflage in the desired position and mark the screw hole.

Drill the marked hole using a 5 mm drill bit and insert the enclosed Ø5x24 mm wall plugs (A).




x1  
  
Ø5x24

(A)

x1  
  
Ø3x28


(B)

x1  
  
Hex key 2 mm

(C)


- 2 Secure the Camouflage foot on the wall with the enclosed Ø3x28 mm screw (B) and use a Phillips screwdriver with bit PH2 to tighten the screw.

Press the Mini Camouflage on to the foot.

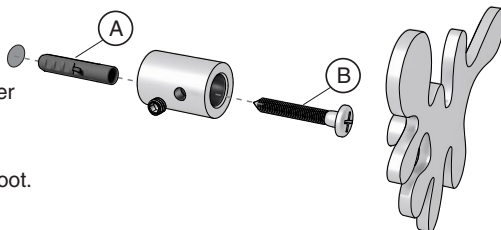

- 3 Securely tighten the set screw (D) with the hex key (C).

You can rotate or combine more Mini Camouflage Hooks to create a unique, personalized configuration.

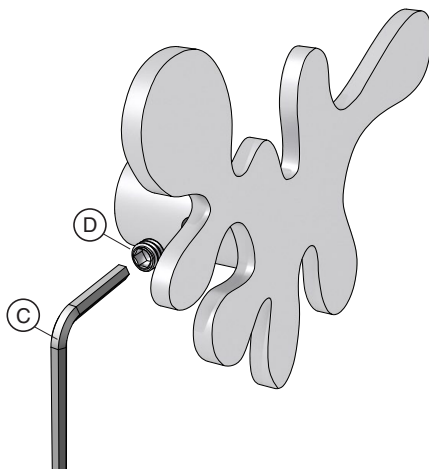

### **CLEANING AND MAINTENANCE**

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

### **ATTENTION:**

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

### **WARNING AND HAZARD NOTICES**

Improper mounting or use can lead to accidents and serious injuries.

**[www.frostdenmark.com](http://www.frostdenmark.com)**

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: [info@frost.dk](mailto:info@frost.dk) • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,  
Instagram, Pinterest and LinkedIn

