


FROST

D E N M A R K

SHOWER SET 1996

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

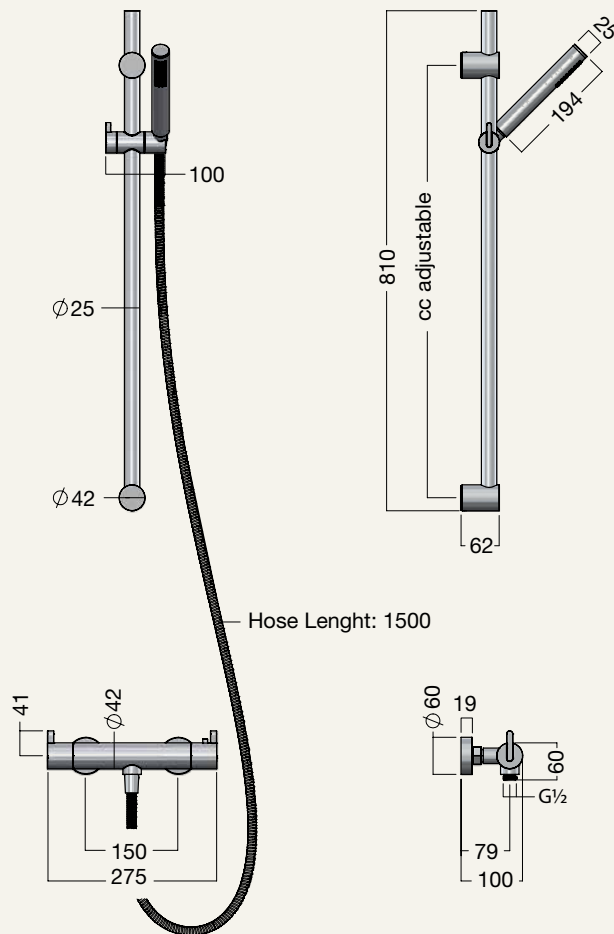


MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:

								
F1996 BRUSHED STAINLESS	F1996-P POLISHED STAINLESS	F1996-BOC BRUSHED COPPER	F1996-C POLISHED COPPER	F1996-BMG BRUSHED GOLD	F1996-GO POLISHED GOLD	F1996-BCB BRUSHED BLACK	F1996-B MATT BLACK	F1996-W MATT WHITE


BEFORE MOUNTING

- 1 Before installing, make sure the hot water valve is on the left and the cold is on the right. If that's not the case, contact a professional contractor.
- 2 Turn off the water supply before installation and remove any existing unit.

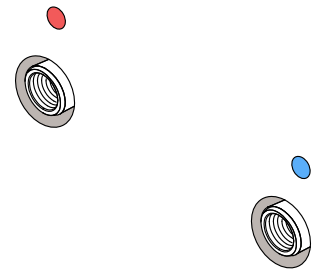


MOUNTING THE MIXER


- 3 Screw in the S-connections (A). Check their position when they protrude approximately 34 mm from the wall, the CC distance between the two S-connections must be 150 mm.
- 4 When in the right positions make markings, and then remove the connections.

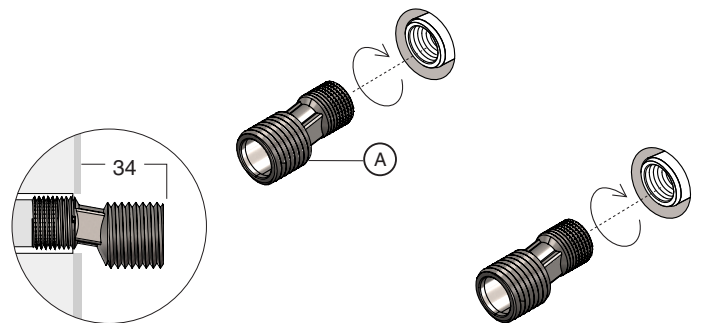

- 5 Seal them with PTFE tape, and screw them back in with a spanner until the markings line up. Make sure not to mix up the left and right connections. Check the alignment with a spirit level.
- 6 Once the connections are fitted, fill the gap between the wall and the connections with a permanently elastic sealant.

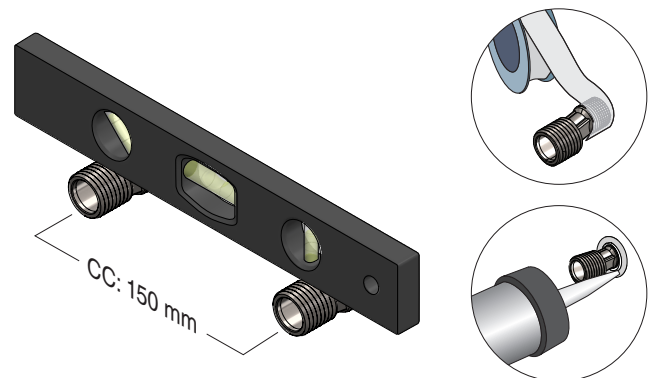


- 7 Screw the Cover Escutcheons (B) onto the S-connectors (A).
- 8 Remove the red and blue caps on the mixer and insert the two Filters (C) into the inlets of the thermostatic mixer as illustrated.
- 9 Mount the Mixer onto the connections using the two Union Nuts (D) as shown. Tighten with a spanner, but place a cloth between the spanner and the nuts to avoid damaging them.

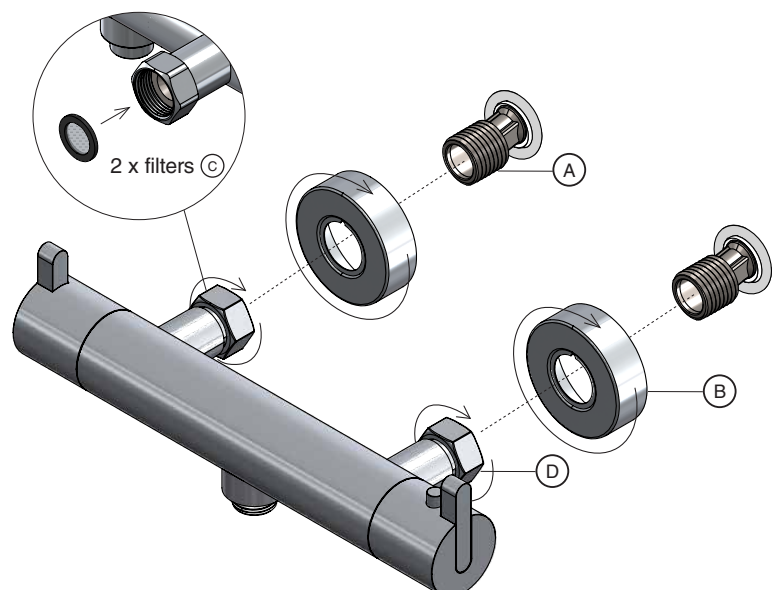


MOUNTING THE SHOWER BAR


- 10 Before installing decide the desired height of the Shower Bar (E).
- 11 Mark the position of the two brackets (F) and (G). Adjust markings to ensure that the bar will be centered over the mixer.
- 12 If you have tiles or predrilled holes from an old unit, the top bracket (F) can be adjusted by pushing it into place.

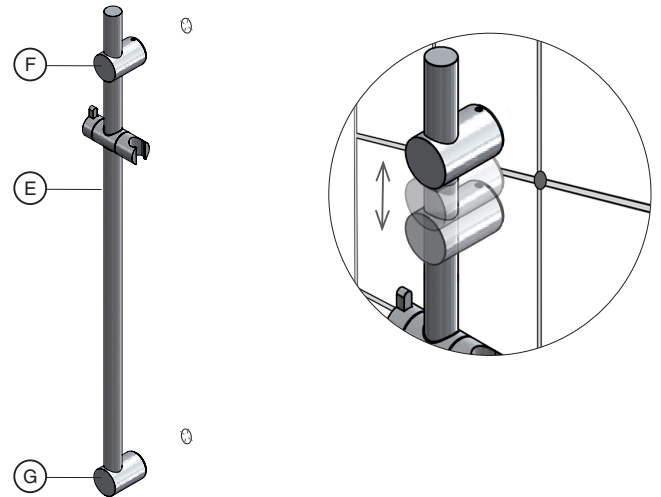

- 13 Drill the marked holes using a 5 mm drill bit and insert the enclosed Ø5x30 mm wall plugs (H).
- 14 Secure the brass inserts (I) onto the wall with the enclosed Ø6x50 mm screws (J) and use a Phillips screwdriver with bit PH2 to tighten the screws.
- 15 Press the Shower Bar onto the brass inserts (I) and tighten the set screws (K) under both brackets with the hex key (L).

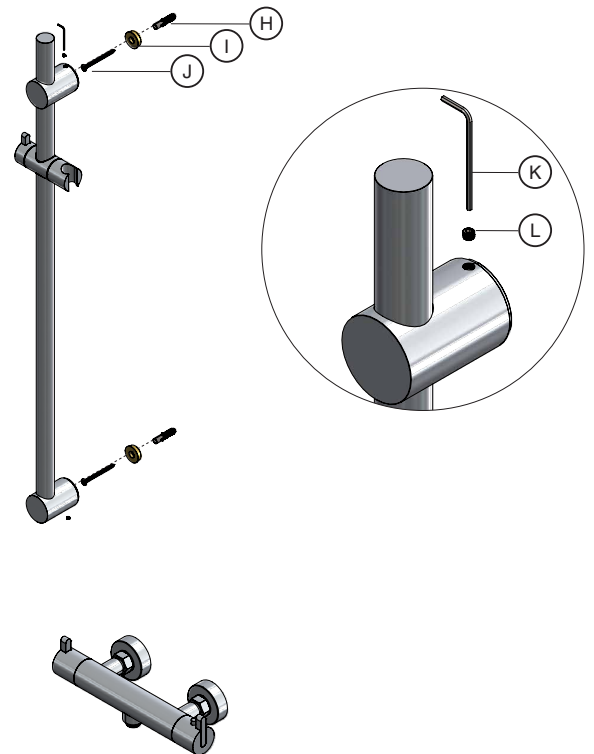


- 16 Connect the Shower Hose (M) to the Thermostatic Mixer, make sure the Hose Washer (N) is inserted.
- 17 Then connect the Handheld Shower Head (O) to the Shower Hose (M). Ensure the Hose Washer (P) is properly inserted.

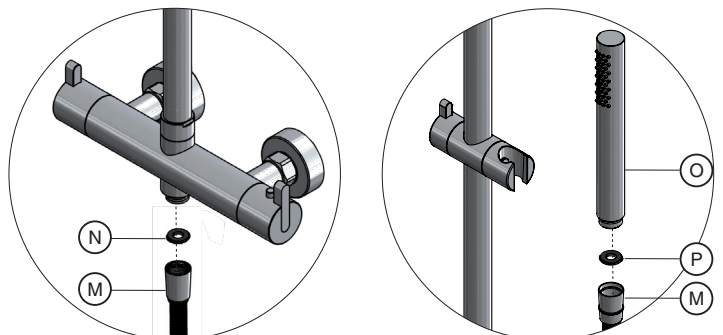

-
- 18 Place the Shower Head into the shower head holder.

The Shower Set 1996 is now ready for use.

- 19 Proper care and regular cleaning will help extend the lifespan of your Shower Set. FROST also provides different spare parts for purchase to ensure long-term functionality.

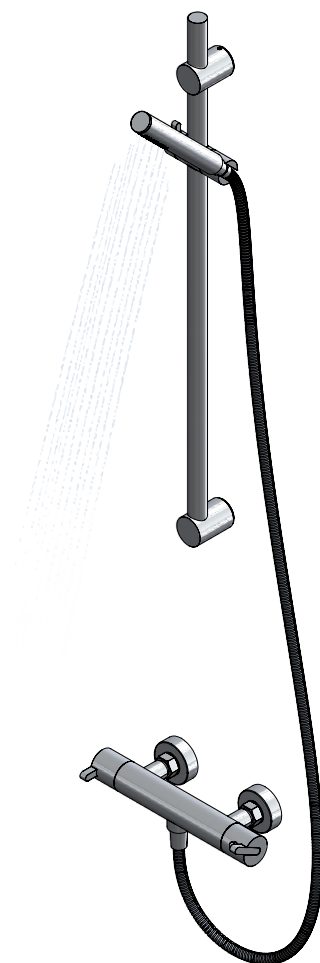


HOW TO USE

- ⓘ The height of the Shower Head can be adjusted up or down by loosening the thumb turn of the adjusting unit
- ⓘ The Shower Head can also be rotated into the preferred position, by turning the Holder.
- ⓘ If the Shower Holder becomes loose, you can tighten it. Simply remove the screw cover, inside the Shower Holder and tighten the screw ④.



- ⓘ To turn on the Handheld Shower Head, turn the left Handle forward.
- ⓘ To control the cold and warm water, use the right Handle by following the markings with + and -.

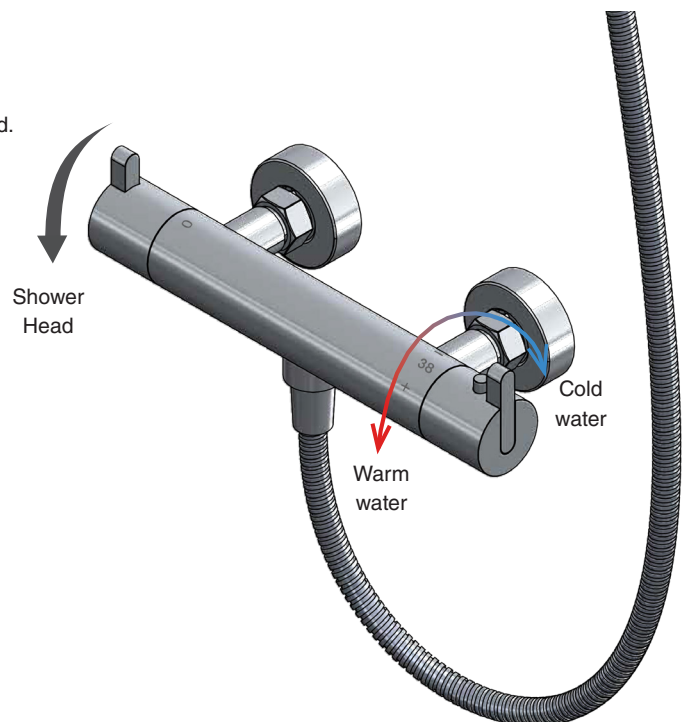

TECHNICAL INFORMATION


Working Pressure	3-5 bar
Max. hot water	65 °C
Flow rate l/min at 3 bar	12.0 L/min

Spare parts (*)

Can be bought for replacement

Shower Hose 1994-2

Shower Head 1994-3

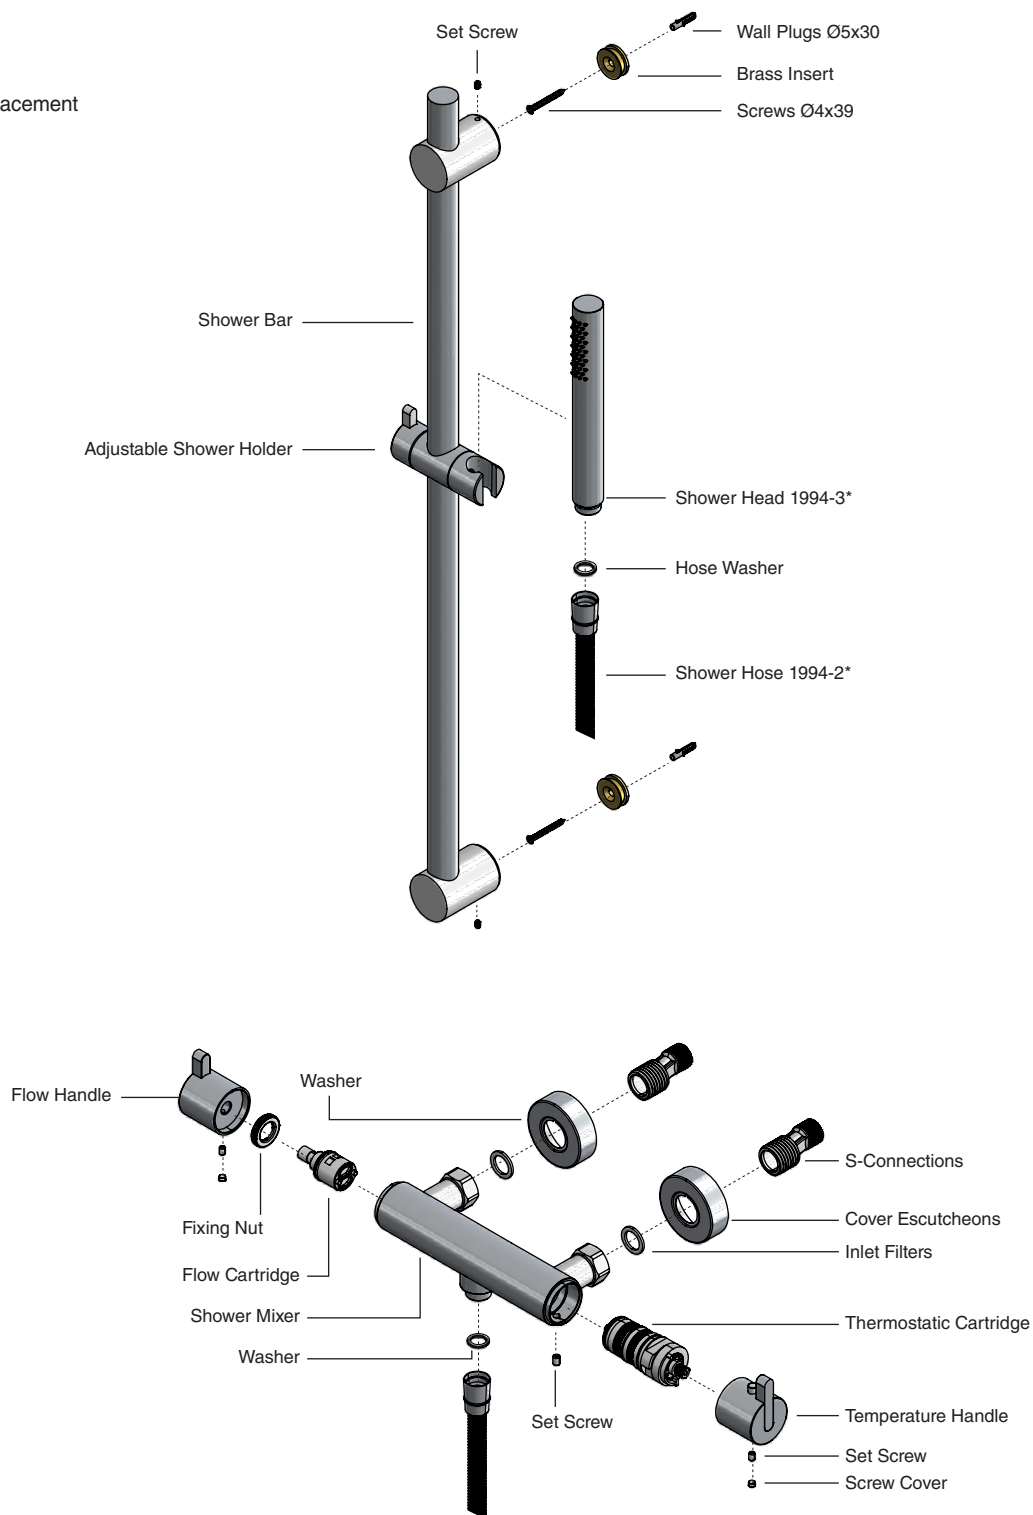



CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

