


# ELEMENT 1051 (A1051)

## **DESIGNED BY FROST A/S**

# PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

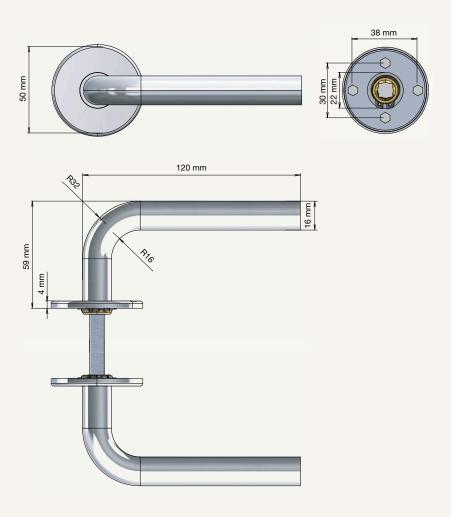

MATERIAL: STAINLESS STEEL AISI 304 AVAILABLE IN TWO FROST FINISHES:




A1051B BRUSHED STAINLESS



POLISHED STAINLESS



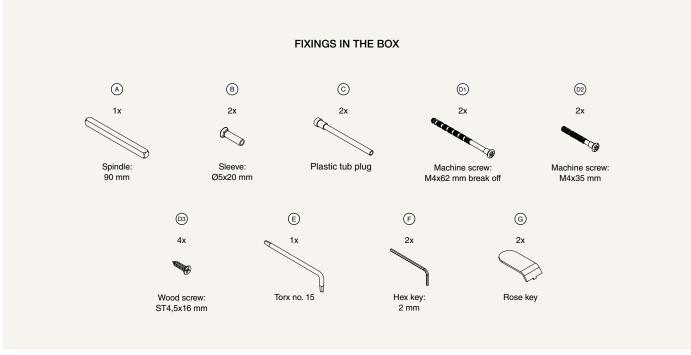


#### MOUNTING OF LEVER HANDLE

Insert two sleeves 8 or wood screws 9 into the backplate with the spindle A attached.

NOTE: The two enclosed plastic tub plugs © can be used to secure the screws and obtain a tighter fit. If used; cut off the excess part of the plastic tub plug ©.


NOTE: Make sure that the spindle A is oriented correctly, as shown in the illustrations, with the hole closest to the bottom.

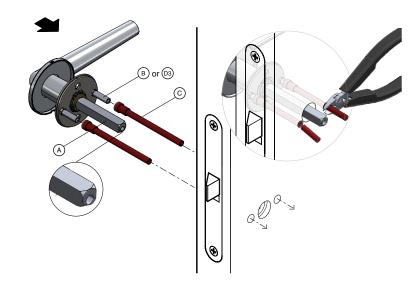

Mount the other handle by using (01), (02) or (03)

If used; cut the machine screw (b) with an angle grinder so its length matches the thickness of the door minus 1 mm.

NOTE: Door thickness: 40-69 mm

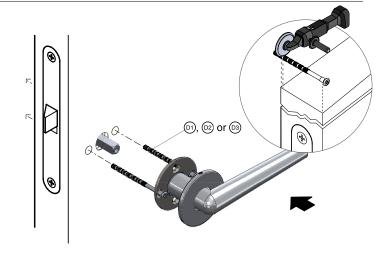

Use the enclosed torx key no. 15  $\stackrel{\frown}{\mathbb{E}}$  to tighten the machine screw  $\stackrel{\frown}{\mathbb{D}}$  or  $\stackrel{\frown}{\mathbb{D}}$  until fastened.


Click the rosette cover onto the backplate.



Secure the handle on the spindle  $\widehat{\mathbb{A}},$  by using the hex key  $\widehat{\mathbb{F}}$  to tighten the set screw.

When the set screw is tightened enough, a guide hole is punched into the spindle.

**NOTE:** For detatching the rosette cover, insert the rose key (a) in the notch underneath the rosette cover.

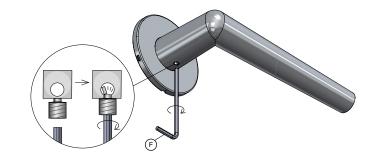

ALL MEASUREMENTS ARE IN MILLIMETERS

 $\left(4\right)$ 

#### **CLEANING AND MAINTENANCE**

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

#### WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

#### www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn





