


# TOILET ROLL HOLDER 1909

### DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS AND FITTING INSTRUCTIONS

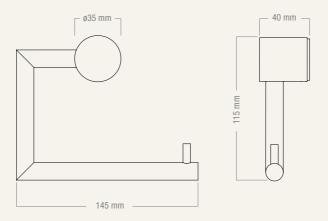

# MATERIAL: STAINLESS STEEL AVAILABLE IN THE NINE FROST FINISHES:











N1909-C POLISHED COPPER











N1909 BRUSHED STAINLESS

POLISHED STAINLESS

COPPER


BRUSHED GOLD

N1909-BMG N1909-GO N1909-BCB POLISHED GOLD

BRUSHED BLACK

N1909-B MATT BLACK


N1909-W MATT WHITE

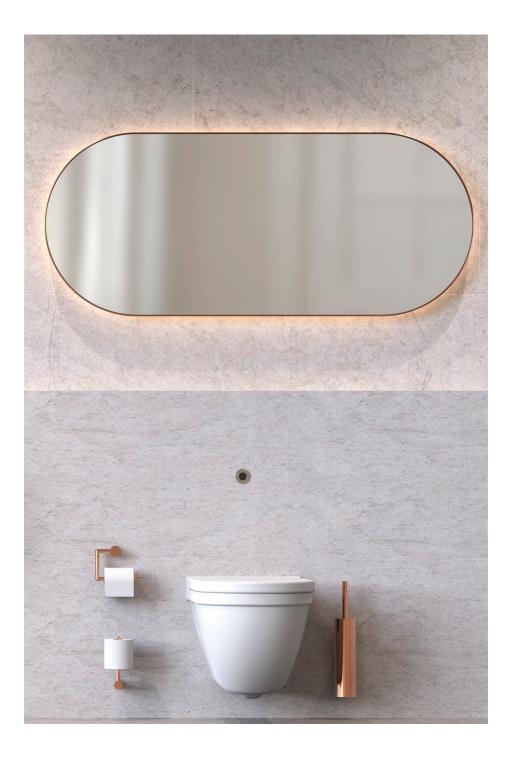


## MOUNTING

1 Place the Toilet Roll Holder in the desired position and mark the screw holes as illustrated, with a CC distance of 16 mm.

Drill the marked holes using a 6 mm drill bit and insert the enclosed Ø6x30 mm wall plugs (A).

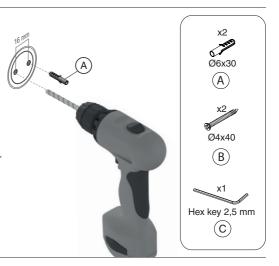


Secure the insert on the wall with the enclosed Ø4x40 mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

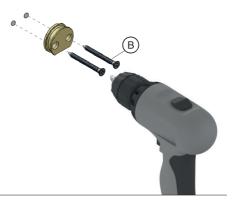

Press the Toilet Roll Holder on to the insert.

(3)

Securely tighten the set screw D underneath with the hex key C.

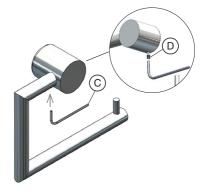

#### CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

#### EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

#### WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

#### www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook, Instagram, Pinterest and LinkedIn

