


**FROST**  
DENMARK

## TOILET ROLL HOLDER 1101 & BACK PLATE 1102

DESIGNED BY FROST DENMARK

PRODUCT DETAILS, TECHNICAL DETAILS  
AND FITTING INSTRUCTIONS

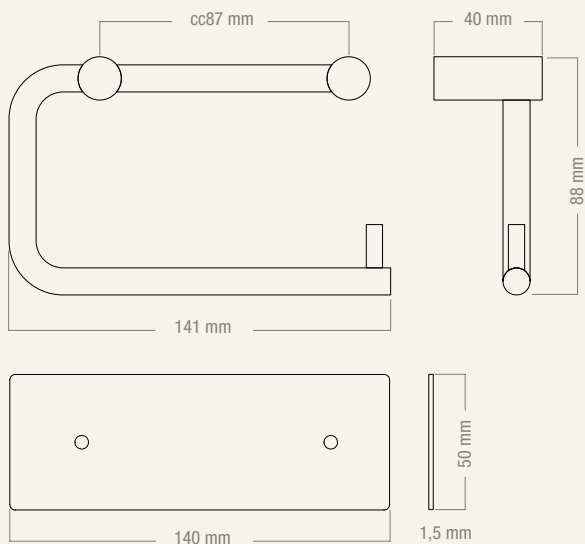

**MATERIAL: STAINLESS STEEL**

**AVAILABLE IN THE NINE FROST FINISHES:**



N1101  
N1102

BRUSHED  
STAINLESS



O1101  
O1102

POLISHED  
STAINLESS



N1101-BOC  
N1102-BOC

BRUSHED  
COPPER



N1101-C  
N1102-C

POLISHED  
COPPER



N1101-BMG  
N1102-BMG

BRUSHED  
GOLD



N1101-GO  
N1102-GO

POLISHED  
GOLD



N1101-BCB  
N1102-BCB

BRUSHED  
BLACK



N1101-B  
N1102-B

MATT  
BLACK



N1101-W  
N1102-W


MATT  
WHITE



## MOUNTING

- 1 Place the Toilet Roll Holder in the desired position and mark the screw holes as illustrated, with a CC distance of 87 mm.

Drill the marked holes using a 6 mm drill bit and insert the enclosed  $\varnothing 6 \times 30$  mm wall plugs (A).

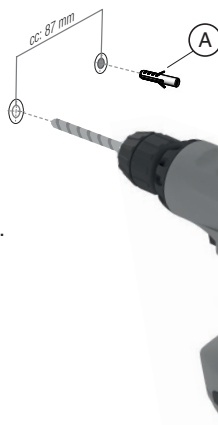

x2  
  
 $\varnothing 6 \times 30$

(A)

x2  
  
 $\varnothing 4 \times 48$


(B)

x1  
  
Hex key 2 mm

(C)


- 2 Secure the inserts on the wall with the enclosed  $\varnothing 4 \times 48$  mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

If you have the additional Backplate 1102, simply place it between the wall and the inserts before screwing them on.

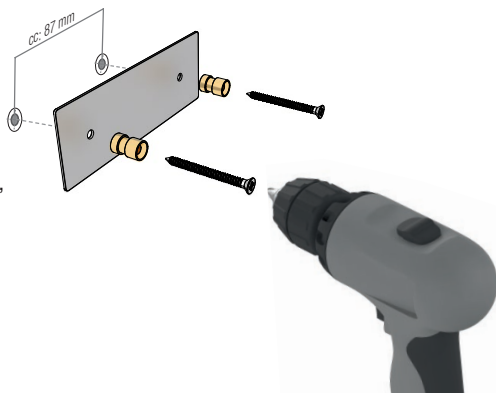

- 3 Press the Toilet Roll Holder on to the inserts.

Securely tighten the two set screws (D) underneath with the hex key (C).

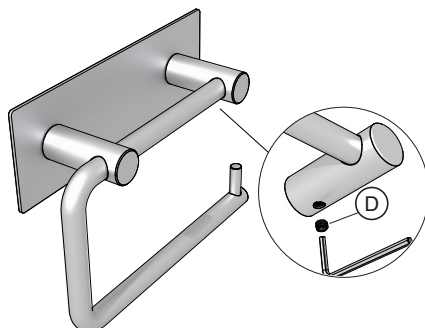

### **CLEANING AND MAINTENANCE**

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

### **ATTENTION:**

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

### **WARNING AND HAZARD NOTICES**

Improper mounting or use can lead to accidents and serious injuries.

**[www.frostdenmark.com](http://www.frostdenmark.com)**

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: [info@frost.dk](mailto:info@frost.dk) • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,  
Instagram, Pinterest and LinkedIn

