


**FROST**  
DENMARK

# SHOWER SHELF 1937 & SHOWER SHELF 1937-1





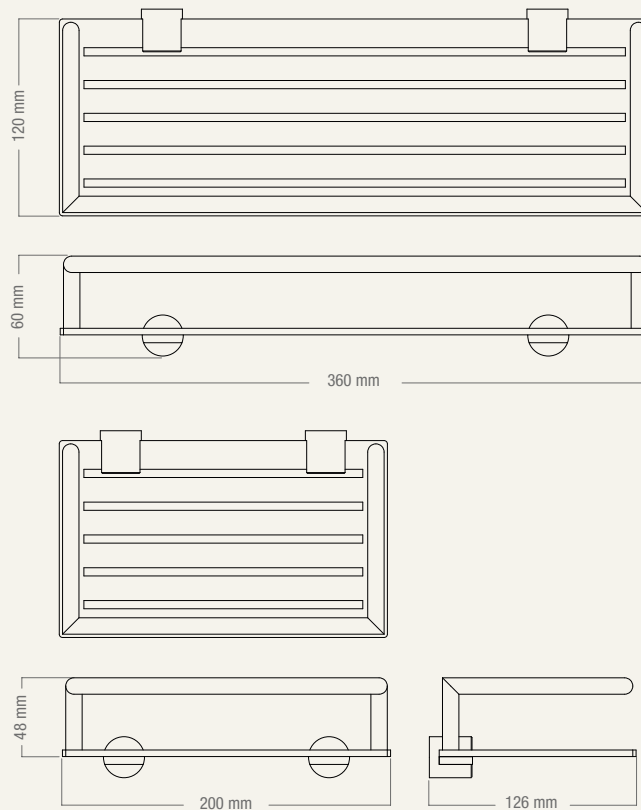




DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS  
AND FITTING INSTRUCTIONS



**MATERIAL: STAINLESS STEEL**

**AVAILABLE IN THE NINE FROST FINISHES:**

								
N1937 N1937-1	O1937 O1937-1	N1937-BOC N1937-1-BOC	N1937-C N1937-1-C	N1937-BMG N1937-1-BMG	N1937-GO N1937-1-GO	N1937-BCB N1937-1-BCB	N1937-B N1937-1-B	N1937-W N1937-1-W
BRUSHED STAINLESS	POLISHED STAINLESS	BRUSHED COPPER	POLISHED COPPER	BRUSHED GOLD	POLISHED GOLD	BRUSHED BLACK	MATT BLACK	MATT WHITE




## MOUNTING

1

Mark the placement for the screw holes.  
We recommend a cc distance of 125 mm for Shower Shelf 1937 and cc 235 mm for Shower Shelf 1937-1.

Drill the marked holes using a 6 mm drill bit and insert the enclosed Ø6x30 mm wall plugs (A).

Secure the brackets on the wall with the enclosed Ø4x40 mm screws (B) and use a Phillips screwdriver with bit PH2 to tighten the screws.

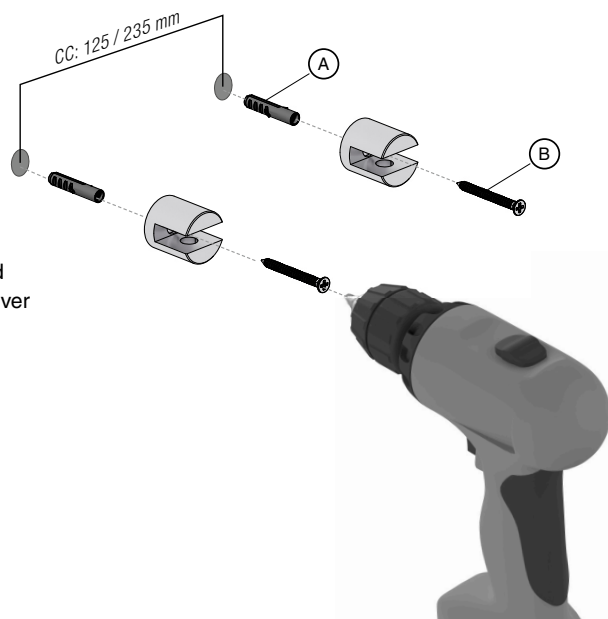

x2  
Ø6x30

(A)

x2  
Ø4x40


(B)

x1  
Hex key 4 mm

(C)


2

Place the rubber spacers inside the brackets.  
Carefully slide the Shower Shelf into the brackets.

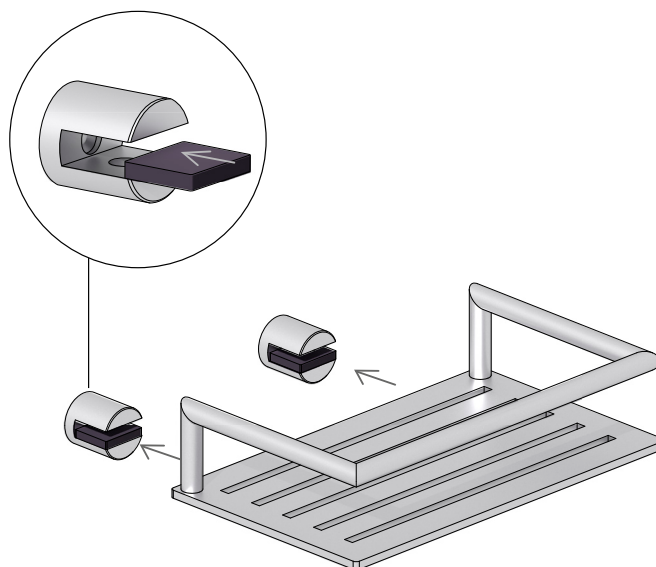

3

Securely tighten the set screws (D) located underneath the brackets with the hex key (C), ensuring the shelf is firmly fixed.

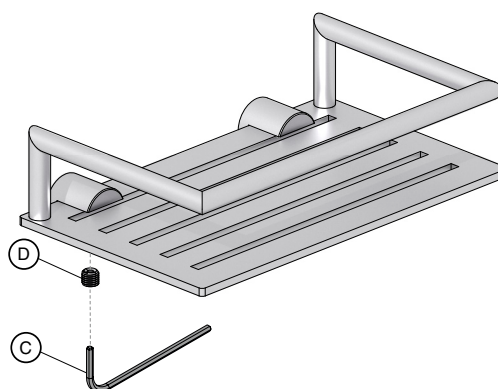



#### **CLEANING AND MAINTENANCE**

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### **ATTENTION:**

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

#### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

#### **WARNING AND HAZARD NOTICES**

Improper mounting or use can lead to accidents and serious injuries.

**[www.frostdenmark.com](http://www.frostdenmark.com)**

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: [info@frost.dk](mailto:info@frost.dk) • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,  
Instagram, Pinterest and LinkedIn

