


**FROST**  
DENMARK

# PAPER DISPENSER 1981, MINI

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS  
AND FITTING INSTRUCTIONS

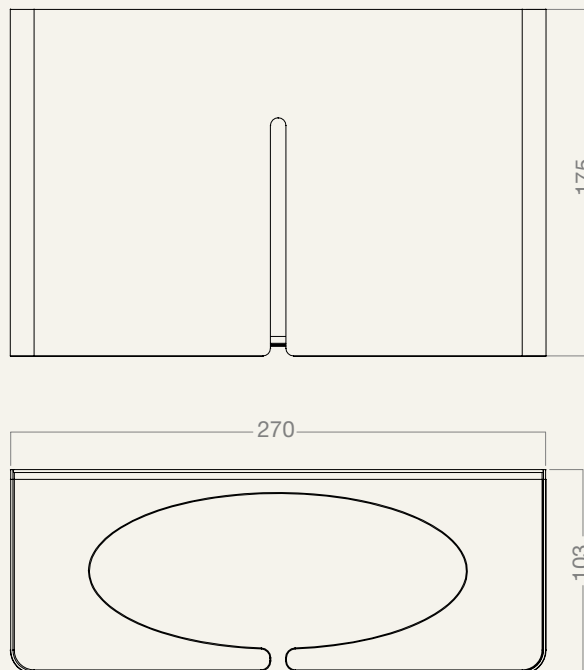

MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:



N1981  
BRUSHED  
STAINLESS



O1981  
POLISHED  
STAINLESS



N1981-BOC  
BRUSHED  
COPPER



N1981-C  
POLISHED  
COPPER



N1981-BMG  
BRUSHED  
GOLD



N1981-GO  
POLISHED  
GOLD



N1981-BCB  
BRUSHED  
BLACK



N1981-B  
MATT  
BLACK



N1981-W  
MATT  
WHITE




## MOUNTING OF N1981:

1

Mark the placement of the screw holes for mounting the Paper Dispenser on the wall.


Drill out the marked holes with a 6 mm drill bit and insert the enclosed Ø6x30 mm wall plugs (A).

With a PH2 bit tighten the 2 enclosed 4x40 mm screws (B), but leave a small gap between the screw head and the wall.

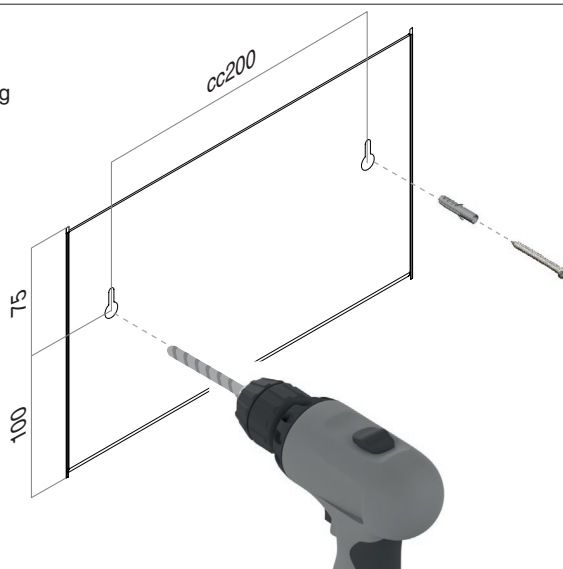

2

Lift the dispenser onto the screws and slide it down until it locks into place. Gently tighten the screws to ensure the dispenser is securely mounted.

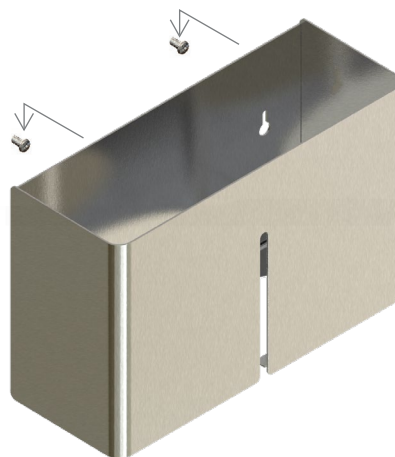


## ADDITIONAL PLASTIC RING:

!

To prevent the paper from tearing when pulled out, please install the additional Plastic Ring 1981-Ring on the opening of the Paper Dispenser.

Press the ring firmly down until it clicks into place. Make sure it is evenly secured all the way around the opening.

The ring helps guide the paper smoothly and protects it from rips during use.

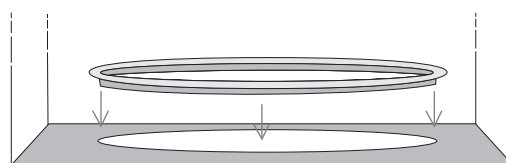

## RECOMMENDED PAPER:

!

TORK Advanced Soft H2 Interfold Hand Towels or similar in with the paper size: 220 x 90 mm



#### **CLEANING AND MAINTENANCE**

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

#### **ATTENTION:**

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

#### **EXCLUSION OF LIABILITY**

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

#### **WARNING AND HAZARD NOTICES**

Improper mounting or use can lead to accidents and serious injuries.

**[www.frostdenmark.com](http://www.frostdenmark.com)**

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: [info@frost.dk](mailto:info@frost.dk) • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,  
Instagram, Pinterest and LinkedIn

