


FROST
DENMARK

DISPENSER HOLDER 1985

DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

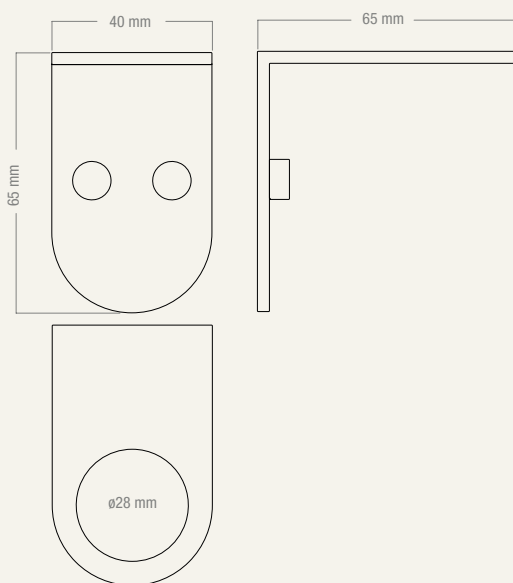

MATERIAL: STAINLESS STEEL

AVAILABLE IN THE NINE FROST FINISHES:



N1985
BRUSHED
STAINLESS



O1985
POLISHED
STAINLESS



N1985-BOC
BRUSHED
COPPER



N1985-C
POLISHED
COPPER



N1985-BMG
BRUSHED
GOLD



N1985-GO
POLISHED
GOLD



N1985-BCB
BRUSHED
BLACK



N1985-B
MATT
BLACK




N1985-W
MATT
WHITE

MOUNTING

- 1 Place the Dispenser Holder in the desired position and mark the screw holes as illustrated, with a CC distance of 20 mm.

Drill the marked holes using a 6 mm drill bit and insert the enclosed $\text{\O}6 \times 30$ mm wall plugs (A).

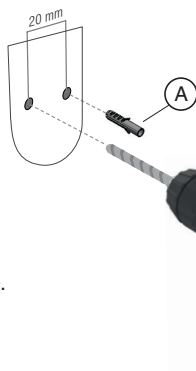

x2

 $\text{\O}6 \times 30$

(A)


x2

 $\text{\O}4 \times 30$

(B)


- 2 To secure the Dispenser Holder on to the wall, first put the bushings (C), and then the threaded washers (D) onto the enclosed $\text{\O}4 \times 30$ mm screws (B).

Use a Phillips screwdriver with bit PH2 to tighten the screws.

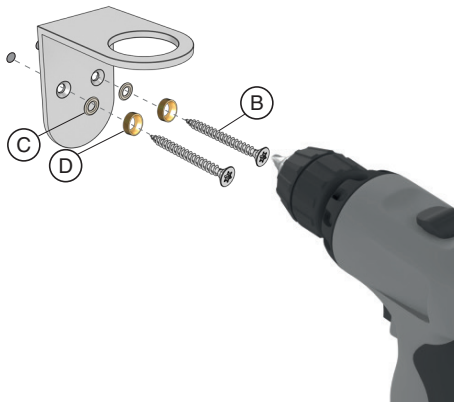

- 3 You can now screw on the screw caps (E) onto the threaded washers.

The Dispenser Holder is now ready for use.

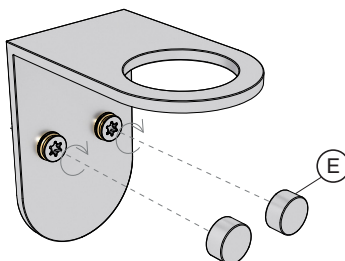

MOUNTING SOAP DISPENSER

① **NOTE:** Soap Dispenser not included.



Use dispensers with a bottle neck diameter of max Ø28 mm. The bottle itself should have a maximum diameter of Ø74 mm when using the caps, or up to Ø83 mm if the holder is mounted with the screws only.

To mount the dispenser, unscrew the pump head from the bottle.

Insert the bottle neck upward into the hole in the Dispenser Holder.

Screw the pump head back onto the bottle to secure it in place.

If the dispenser feels unstable, you can insert the additional rubber gasket (F) between the holder and dispenser head to get a more secure and steady use.

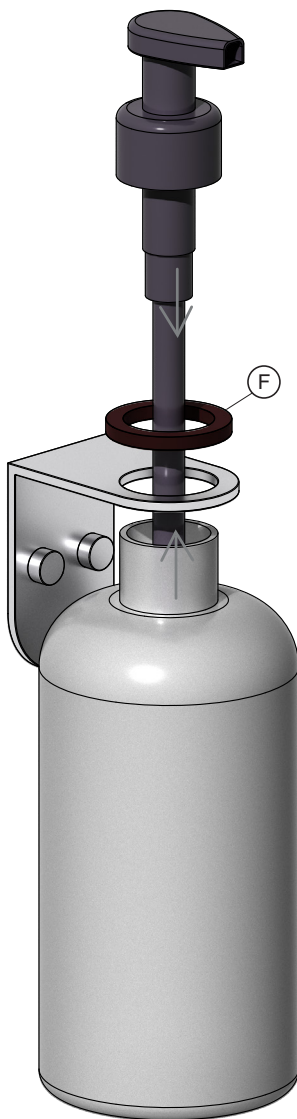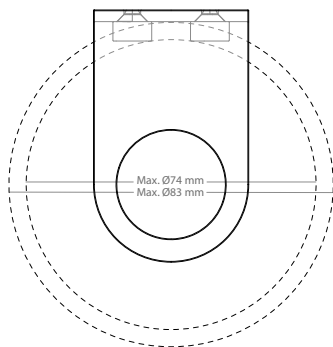

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

