


FROST
DENMARK

HAND DRYER 1994


DESIGNED BY BØNNELYCKE MDD

PRODUCT DETAILS, TECHNICAL DETAILS
AND FITTING INSTRUCTIONS

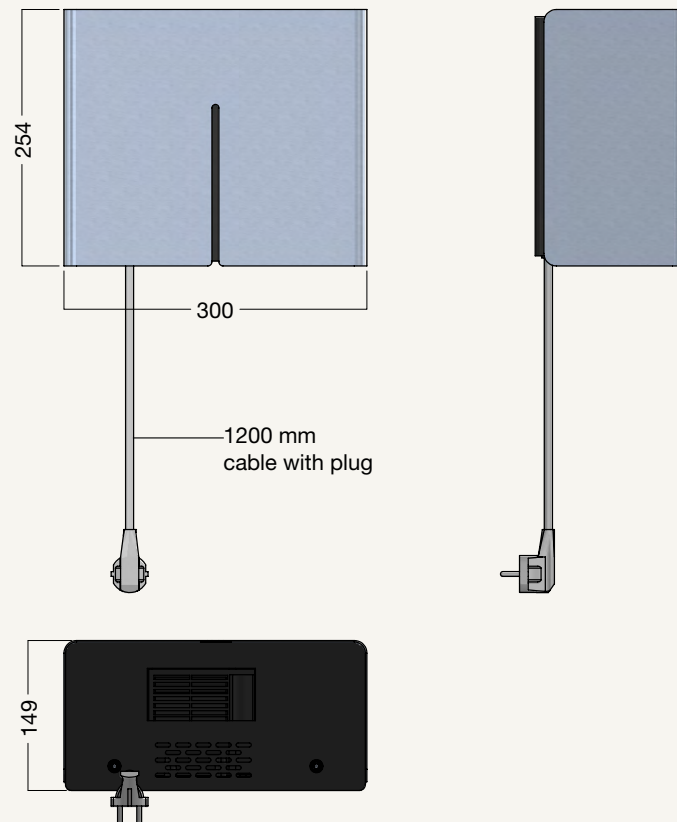

MATERIAL: STAINLESS STEEL



AVAILABLE IN THE NINE FROST FINISHES:

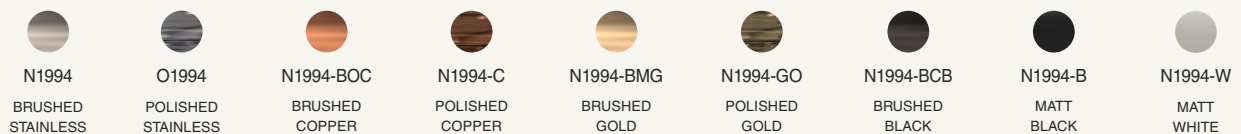

MOUNTING OF THE ELECTRICAL WALL BRACKET UNIT

- 1 Start by mounting the wall bracket unit (A) that contains all the electronic components.

Mark the position and drill out the marked holes.
Insert the four $\varnothing 8 \times 38$ mm wall plugs (B) and use the four enclosed $\varnothing 5 \times 40$ mm screws (C) to secure the unit to the wall, with a screwdriver/power driver.

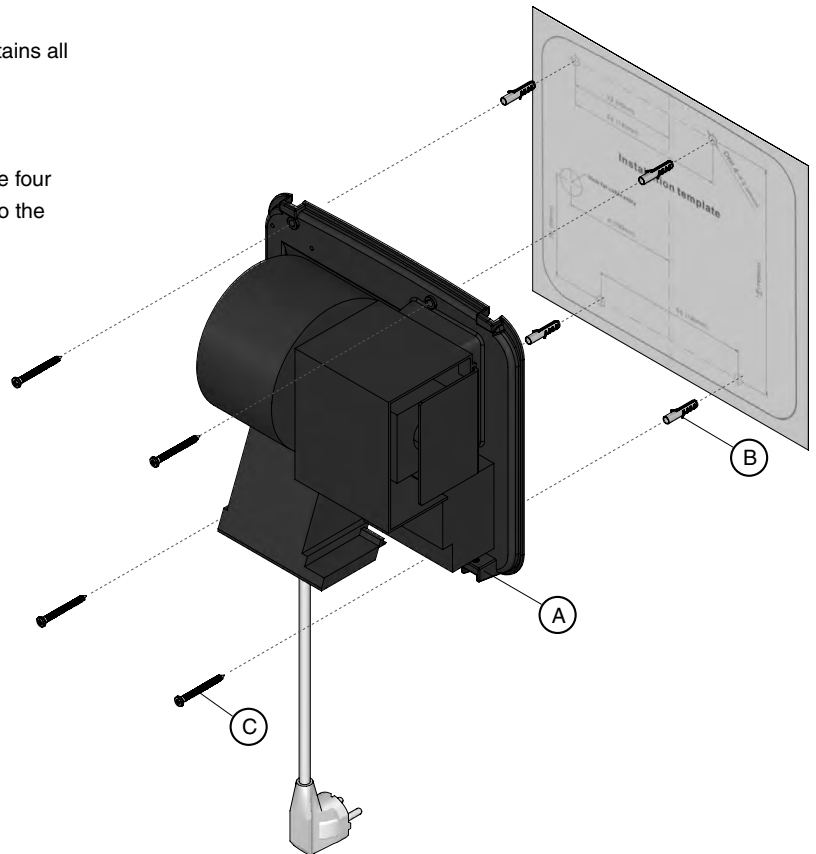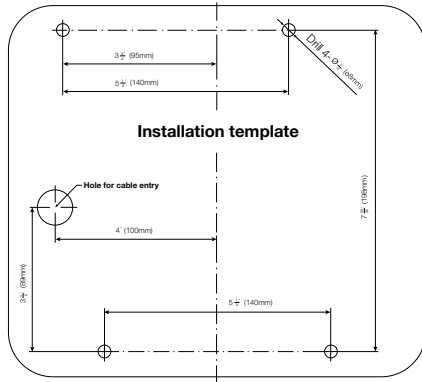

ELECTRICAL CONNECTION

- 2 The electrical connection is possible in two ways:

OPTION 1

The Hand Dryer can be connected using the power cable with the plug, exiting from the bottom of the unit.


This option is useful when there is no in-wall cable routing, or when a standard plug-in solution is preferred for easy access or service.

OPTION 2

The Hand Dryer can also be hard-wired directly through the back of the unit.


This solution is ideal for installations where the power cable is routed inside the wall, creating a clean, hidden connection. Ensure that the electrician prepares the wall opening before mounting the bracket, as the electronic unit will cover the cable entry point.

Please contact a professional electrical contractor for this step.

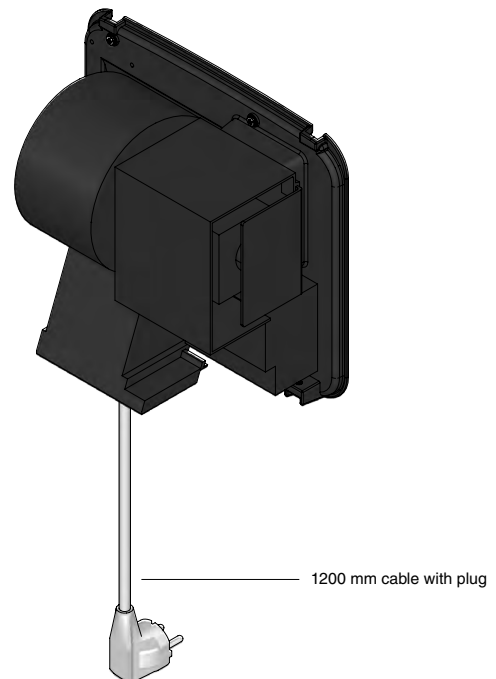


MOUNTING OF THE STAINLESS STEEL COVER

- 3 When the electrical installation has been completed, the Stainless steel cover (D) must be mounted onto the wall bracket unit. Tilt the unit onto the two marked hinges and use the two enclosed M5 screws (E).

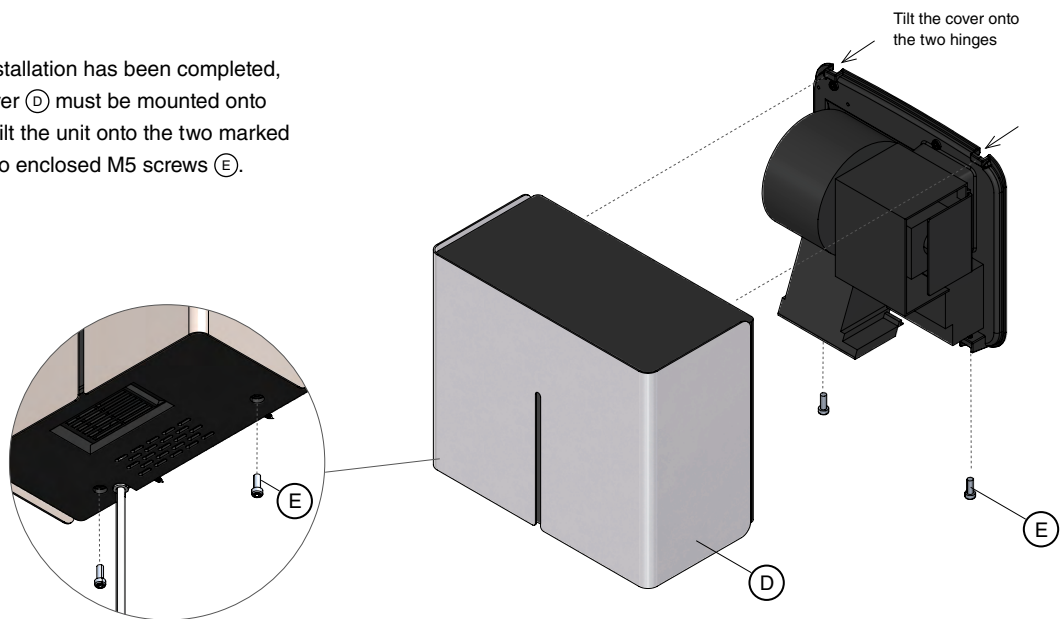

MOUNTING OF OPTIONAL HEPA FILTER

- 4 The Hand Dryer comes with an optional HEPA filter. Place the HEPA filter (F) into the filter holder (G) and use the included screws (H) to mount the holder over the air intake on the underside of the hand dryer.

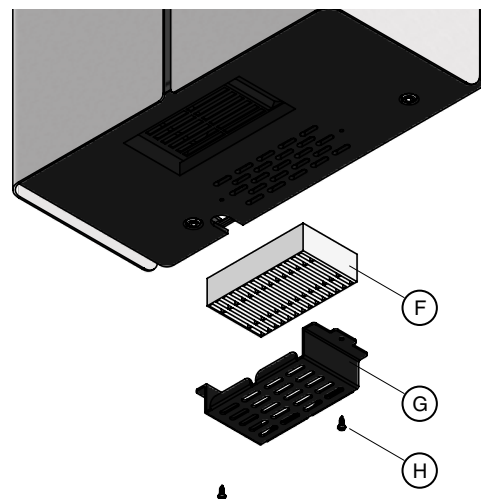


READY FOR USE

- ! The Hand Dryer is now ready for use. On the front, you will see a small air icon indicating the airflow.
- Place your hands under the sensor area. The sensor will register your hands and activate the drying function.


TECHNICAL DETAILS

Operating voltage: 220~; 50 Hz; 2500 W

Weight: 5 kg

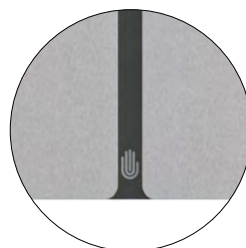

Laserprinted icon to indicate placement of airflow

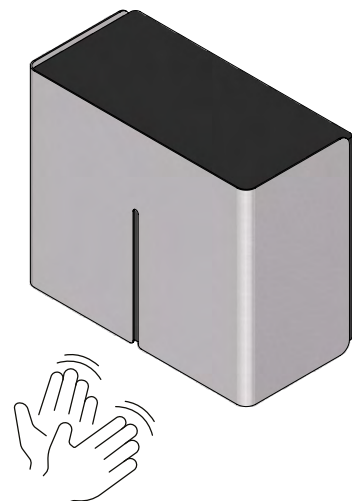

CLEANING AND MAINTENANCE

Surfaces should be cleaned with a microfiber cloth, glass cleaner or other non abrasive and gentle agents.

ATTENTION:

Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product. Steel wool and hard brushes can permanently damage the surface of the steel.

EXCLUSION OF LIABILITY

FROST accepts no liability whatsoever for damage to persons or property that occurs or has occurred as a result of improper installation or maintenance, particularly if the safety instructions and other points to note listed are not or have not been observed in full.

WARNING AND HAZARD NOTICES

Improper mounting or use can lead to accidents and serious injuries.

www.frostdenmark.com

Bavne Alle 32, 8370 Hadsten, Denmark

E-mail: info@frost.dk • Phone: (+45) 87 61 00 32

We are also to be found as frostdenmark on Facebook,
Instagram, Pinterest and LinkedIn

